



MICROPLAST ENGINEERS


MFRS:- CHEMICAL PROCESS PUMPS IN P.P., S.S.-316 & C.I.

9, RAMESHWAR ESTATE, NR.AXIS BANK, HIRAWADI ROAD CORNER, N.H.NO.8 THAKKARBAPA NAGAR, AHMEDABAD-382350.

Visit us at:- www.microplastpumps.webs.com

E-mail:-microplastengineer@yahoo.com

INSTALLATION OF SEAL LESS PUMP.

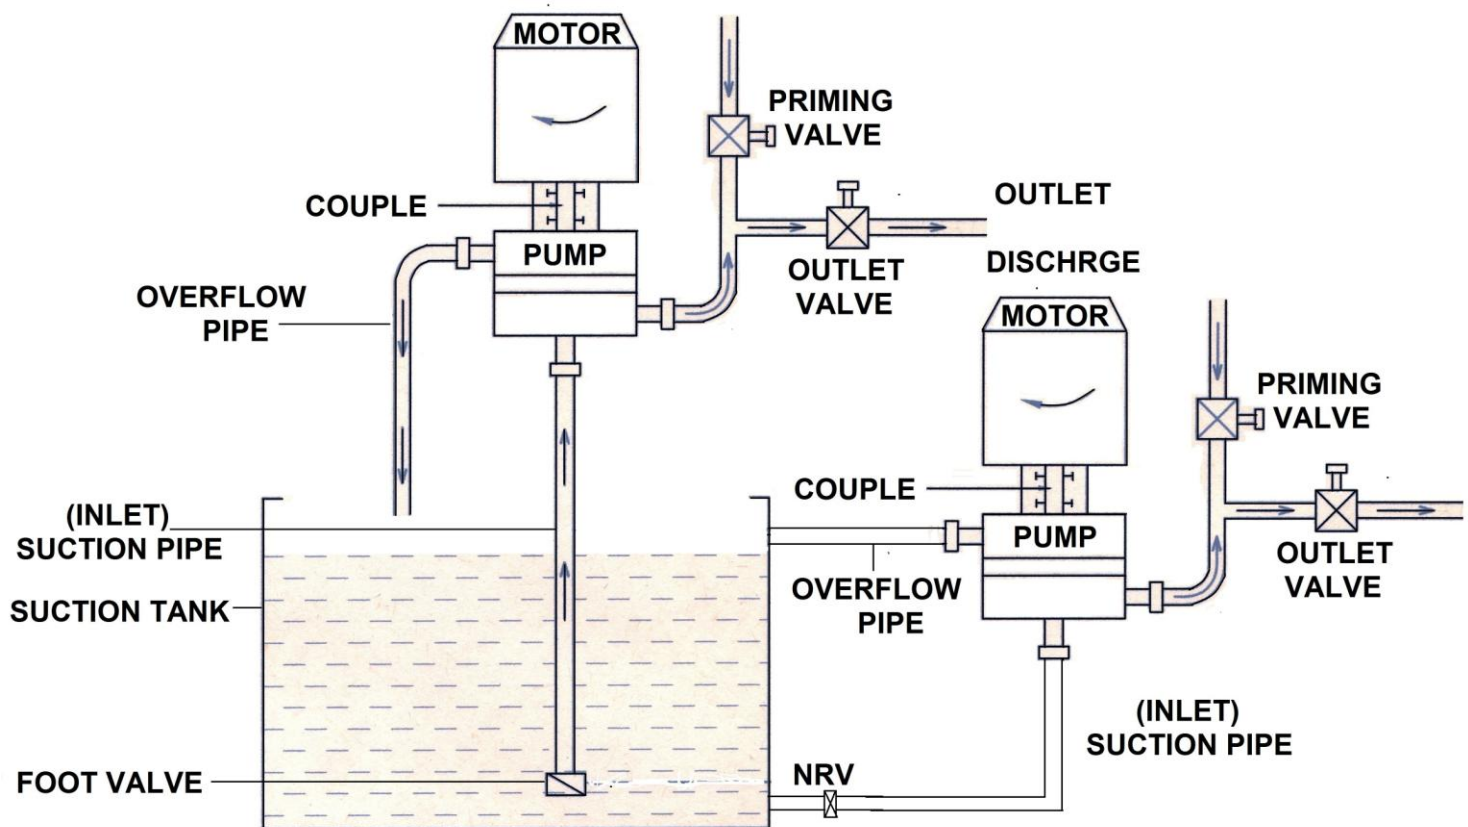

- INSTALL PUMP AS PER ABOVE SKETCH WITH NECESSARY SUPPORTS.
- CLOSE OUTLET VALVE AND OPEN PRIMING VALVE, FILL THE WATER IN PRIMING VALVE PIPE, UNTILL COMPLETE SUCTION PIPE FILLUP AND WATER COMES FROM OVER FLOW PIPE.
- CLOSE PRIMING VALVE AND START THE PUMP IN DIRECTION OF ARROW WATER WILL COME FROM OVERFLOW PIPE.AFTER 2 MINUTES, OPEN OUTLET VALVE GRADUALLY AND GET DESIRED FLOW AT OUTLET PIPE.
- CLOSE OUTLET VALVE BEFORE STOP THE PUMP.